


MAKING CONNECTIONS BETWEEN ECU AND OBDII SYSTEM


- Before making connection, check the connection types by using OBDII scan tool

THE WIRES MUST BE INSERTED INTO OBDII SOCKET AS SHOWN ON DIAGRAM

TYPE OF CONNECTION	NAME OF CONNECTION
Connection Type 1	ISO9141
Connection Type 2	KWP-2000 Fast Init
Connection Type 3	KWP-2000 Slow Init

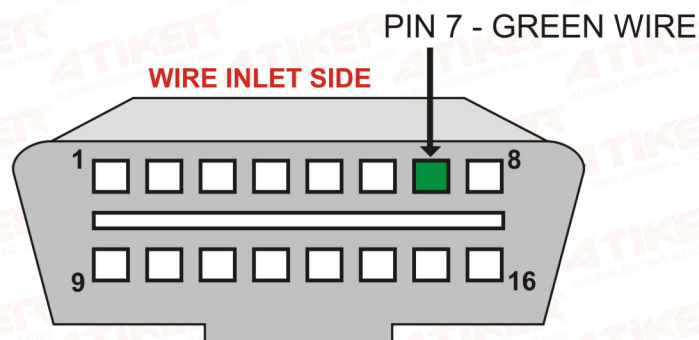

TYPE OF CONNECTION	NAME OF CONNECTION
Connection Type 6	CAN Standard - 250 kbps
Connection Type 7	CAN Extended - 250 kbps
Connection Type 8	CAN Standard - 500 kbps
Connection Type 9	CAN Extended - 500 kbps

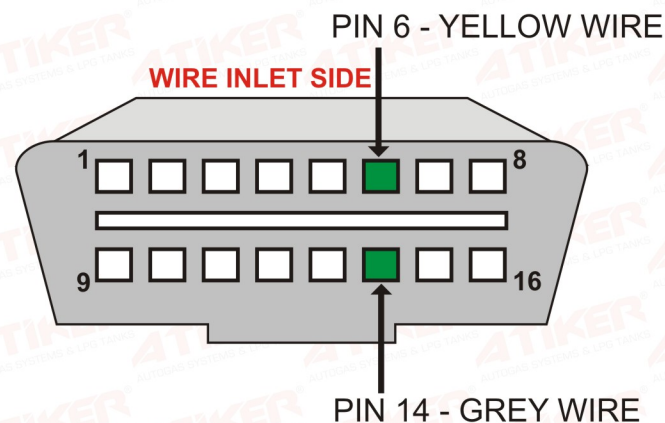

WARNING! WIRES MUST BE CONNECTED TO BEHIND OF OBDII SOCKET